


# TANE ALARM PRODUCTS



*"We Contact The World"®*

## Installation instructions for TAP-10 family of 3/8" Dia. Recessed Door and Window Contacts

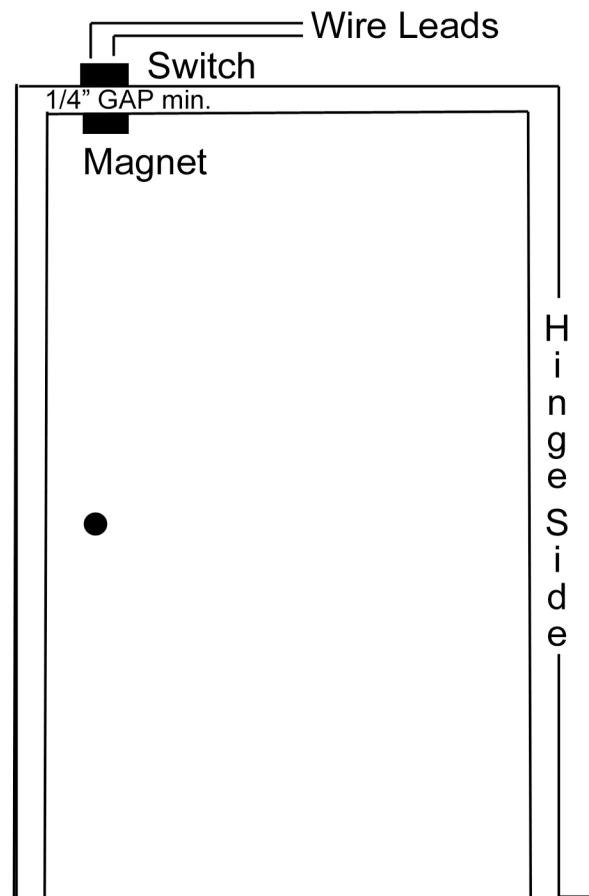

Drill 3/8" hole in window or door frame (NOT on hinge side) to mount the switch

Drill 3/8" hole in window or door to mount the magnet

Make sure Gap is not less than 1/4" between switch and magnet

Splice leads from switch into alarm circuit

NOT for use with Steel doors and windows

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)