


TANE ALARM PRODUCTS



Installation instructions for TANE-3/4 TC 3/4" Dia. Recessed Door and Window Contacts

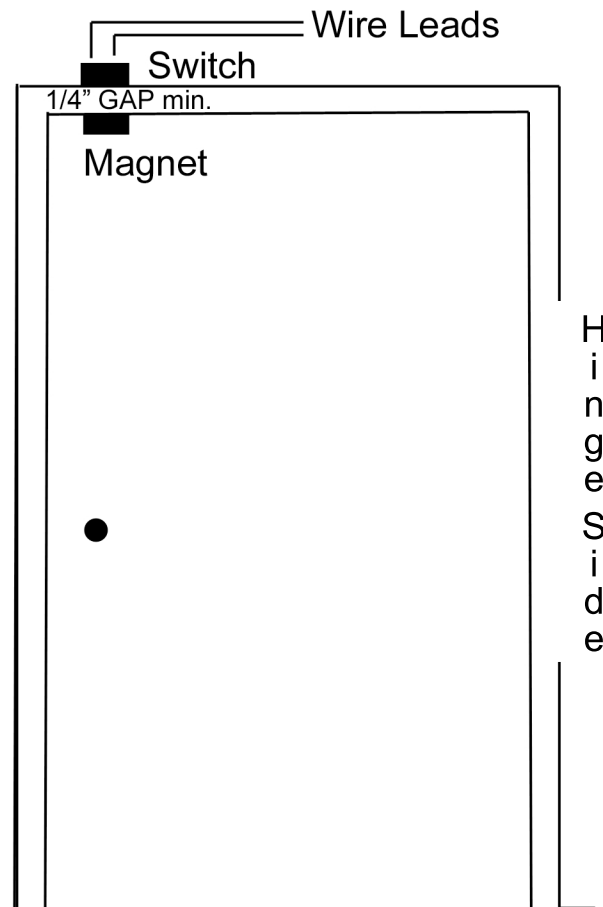

Drill 3/4" hole in window or door frame (NOT on hinge side) to mount the switch

Drill 3/4" hole in window or door to mount the magnet

Make sure Gap is not less than 1/4" between switch and magnet

Insert leads from alarm circuit under the switch terminals

Designed for use with Steel, Wood and other door and window materials

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com