


TANE ALARM PRODUCTS



Installation instructions for TANE PILL, TANE PILL SL, TANE PILL TC Surface Mount Contacts GAP 1/2"

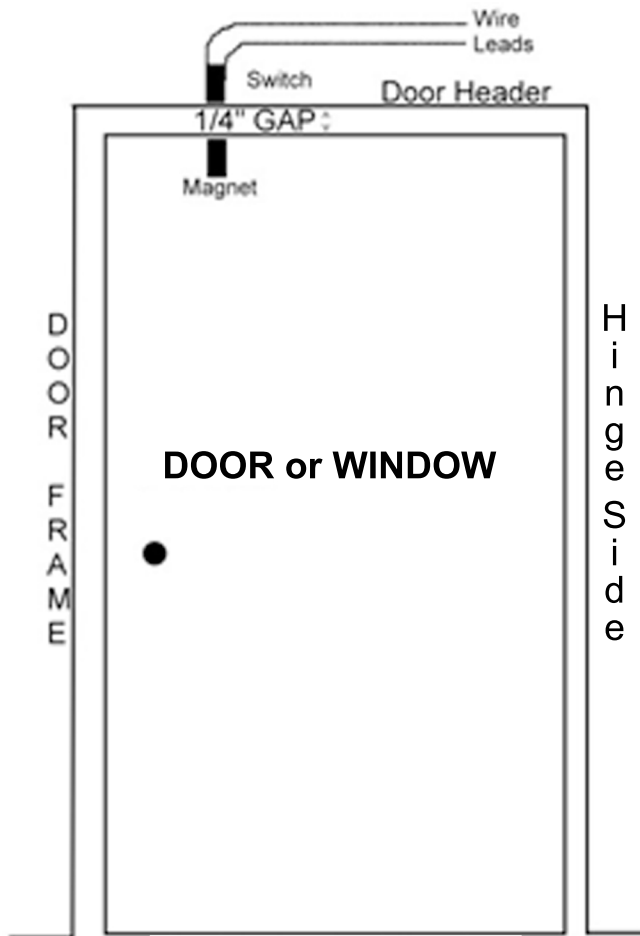

Attach switch to header or side of door or window frame (NOT on hinge side)

Attach magnet to door or window adjacent to the switch

Make sure Gap is not less than 1/4" between switch and magnet

For TANE PILL TC insert leads from alarm circuit under the switch terminals

For TANE PILL & TANE PILL SL attach wire leads to alarm circuit

NOT for use on Steel, surfaces

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com