


# TANE ALARM PRODUCTS



*"We Contact The World"®*

## Installation Instructions for GP-23 Family of Hidden Wire Surface Mount Alarm Contacts Gap 1.26"

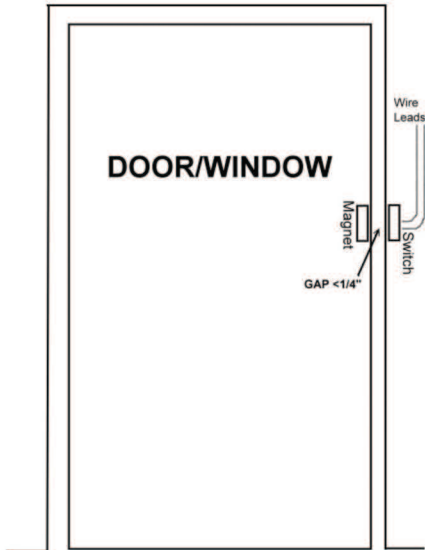

Mount contact on side or top of door or window frame (not on hinge side.)

Mount magnet on door or window using mounting screws .

Make sure the gap between contact and magnet is less than ¼" apart.

Put leads from alarm circuit under contact terminals.

A compatible power source with power-limited output, and that is UL® Listed for Residential or Commercial Burglary Alarm applications shall be used with the magnetically-actuated switch.

## WWW.TANEALARM.COM

906 Jericho Tpke

New Hyde Park, N.Y. 11040

[www.magneticcontacts.com](http://www.magneticcontacts.com)

516 328-3351

800 852-5050

FAX: 516 326-9125