


# TANE ALARM PRODUCTS



## Installation instructions for SD-80 Family of “Steel Door” 1” Dia. Recessed Door & Window Contacts

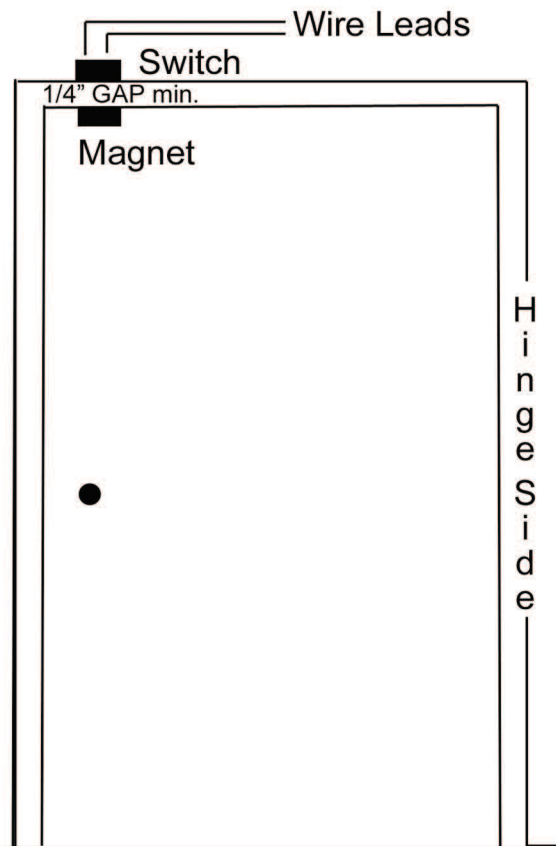

Drill 1” hole in window or door frame (NOT on hinge side) to mount the switch

Drill 1” hole in window or door to mount the magnet

Make sure Gap is not less than 1/4” between switch and magnet

Splice leads from switch into alarm circuit

Designed for use with Steel, Wood and other door and window materials

A compatible power source with power-limited output, and that is UL® Listed for Residential or Commercial Burglary Alarm applications shall be used with the magnetically-actuated switch.

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)