


TANE ALARM PRODUCTS



"We Contact The World"®

Installation Instructions for TANE-86 MINI Family of Armored Overhead-Door Commercial Alarm Contacts Gap2.5"

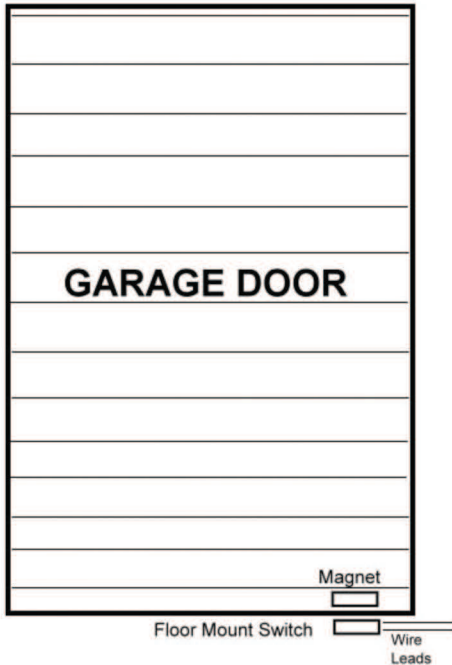

Mount contact on garage floor near the bottom of the garage door
Mount magnet-bracket at bottom of garage door, above the contact
Make sure gap between contact and magnet is not less than 1/4"
Splice leads into alarm circuit.

A compatible power source with power-limited output, and that is UL® Listed for Residential or Commercial Burglary Alarm applications shall be used with the magnetically-actuated switch.

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com